

OSD Settings menu FFOSD - N2 - Extraordinary Technology

1. Battery voltage calibration
2. Remote control signal calibration
3. Throttle range calibration
 - Maximum throttle
 - Minimum throttle
 - OK
4. Video format setting
 - PAL
 - NTSC
5. Interface type setting
 - Chinese
 - DJI
 - Custom
6. Height acquisition device
 - barometer
 - GPS
7. Direction acquisition device
 - electronic compass
 - GPS
8. Get throttle mode
 - PWM
 - PPM
9. Roll direction
 - positive
 - negative
10. Tilt direction
 - positive
 - negative
11. Horizon display
 - ON
 - OFF
12. Text display
 - ON
 - OFF
13. Automatically set home
 - ON
 - OFF
14. Boot and restore default settings
15. Next menu
16. Exit

1. Battery voltage settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

2. Flight time settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

3. Flight speed settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

4. Altitude settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

5. Flight mode settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

6. Direction home

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

7. Distance from home settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

8. Cumulative voyage settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

9. Remote control signal settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

10. Throttle settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

11. Elevating rate settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

12. Latitude and longitude settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

13. Set the number of satellites

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

14. Azimuth settings

- Show (Y/N)
- Row (1-14)
- Column (1-28)
- Exit

15. Previous menu

16. Exit