








NOTE: CUT LIGHTENING HOLES IN RIBS TO REDUCE WT.




NOTE: PLACE SERVOS, SPEED CONTROLLER, ETC. TO ACHIEVE PROPER C.G. AILERON SERVOS ARE PLACED IN LOCATION NOTED MAKE SURE ONE IS ON LEFT SIDE AND ONE IS ON RIGHT SIDE OF FUSELAGE

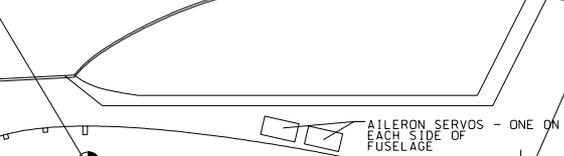

FUSELAGE MADE FROM 3/4" WHITE FOAM SHEET



RECESS SPAR 1/8" INTO FOAM COVER AND HINGE RUDDER BEFORE GLUING TO FUSELAGE

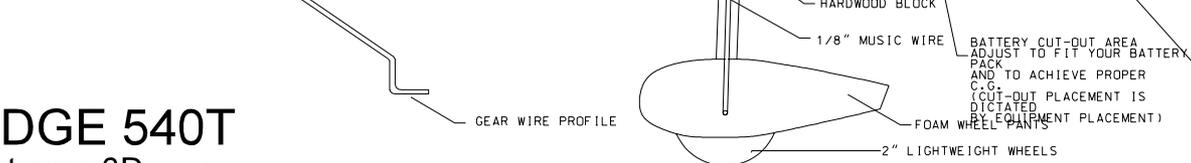

1/16" SHEET Balsa ALONG ENTIRE PERIMETER OF FUSE. GRAIN RUNS LENGTHWISE ALONG FUSE. \*\*DO NOT OMIT\*\* PROVIDES TORSIONAL STRENGTH FOR FUSE.

# EDGE 540T

## Extreme 3D

Designed and Drawn by: Tim Hart  
Wingspan: 30 inches